




SEGWAY

SEGWAY AT10/AT10 W ACCESSORIES INSTALLATION MANUAL



FRONT WINDSHIELD (AT10/AT6)

FRONT WINDSHIELD

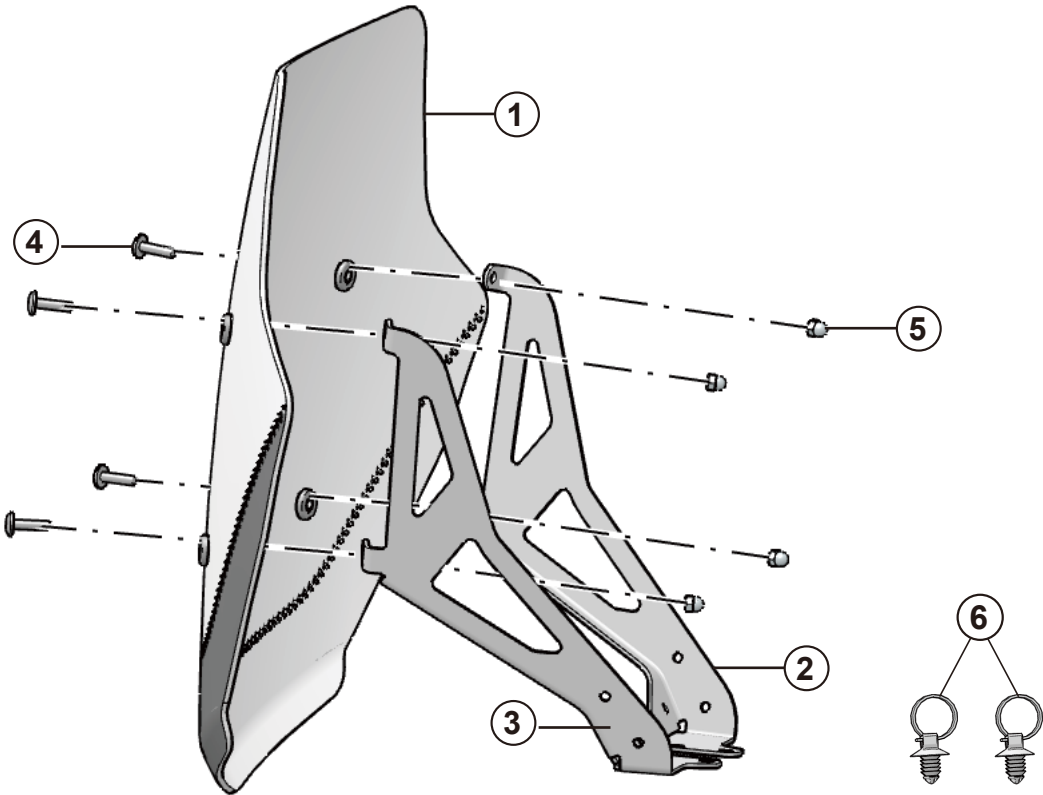


ITEM	PART NAME	PART NUMBER	QTY	REMARKS
1	PC FRONT WINDSHIELD	A12-R103300-000-00	1	
2	RIGHT BRACKET, FRONT WINDSHIELD	A12-R103200-FB0-00	1	AT10 \ AT6
3	LEFT BRACKET, FRONT WINDSHIELD	A12-R103100-FB0-00	1	AT10 \ AT6
4	BOLT M6×25	T03000007007	4	
5	NUT M6	BG009230-06012-Z61	4	
6	POSITIONING TIE Φ7×180	T05000001004	2	

TIPS


These installation instructions apply to multiple ATV models. Illustrations may vary slightly; please refer to the actual vehicle.

FRONT WINDSHIELD (AT10/AT6)


1. Remove the mounting bolts from the handlebar cover (if equipped) and take off the cover. If a windshield is installed, the handlebar cover does not need to be reinstalled.

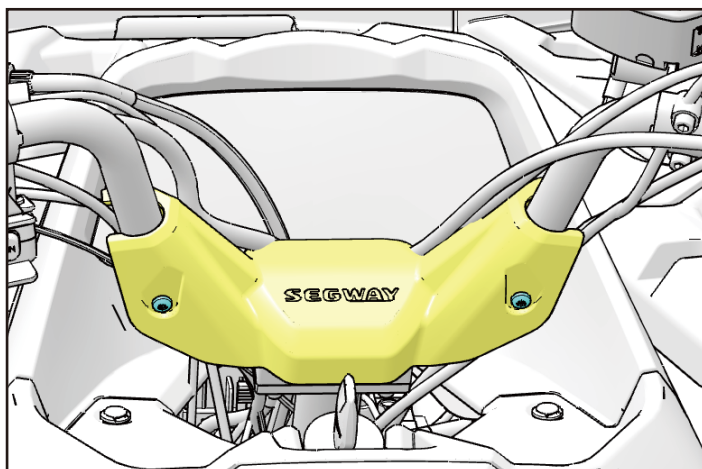


2. Remove the 4 bolts from the upper aluminum cover of the handlebar, then take off the cover.

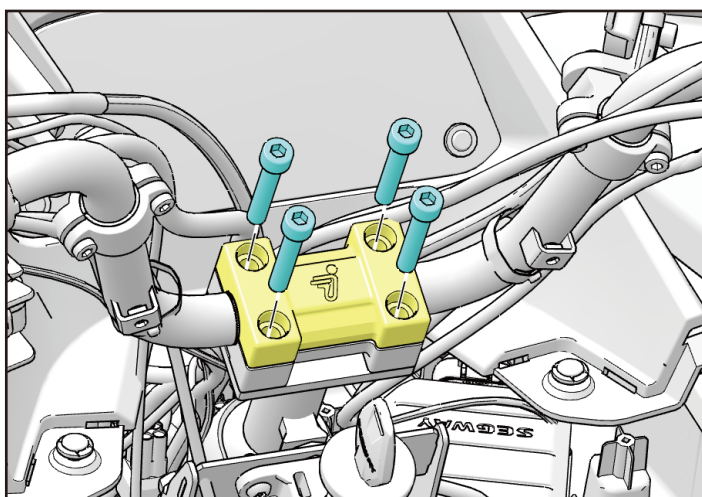


3. Move the handlebar and the lower aluminum cover of the handlebar upward to create a gap at the bottom. Then, place the left and right windshield brackets under the lower aluminum cover of the handlebar.

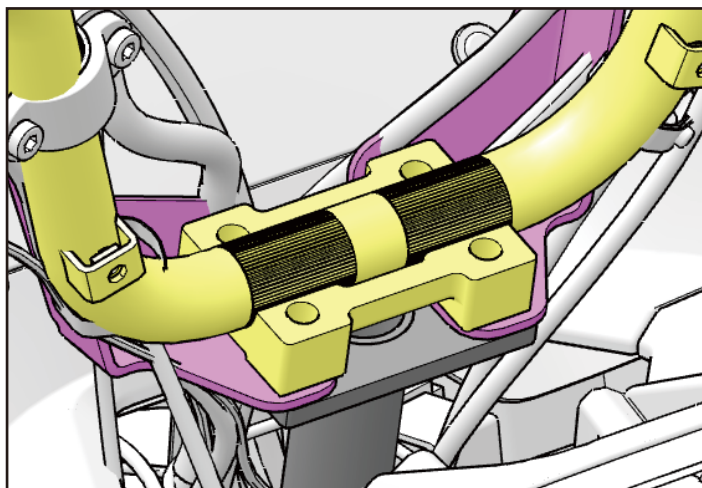

4. Adjust the handlebar to the desired position, then secure it using the 4 handlebar mounting bolts. Tightening torque: $3.5 \pm 3 \text{ N}\cdot\text{m}$.

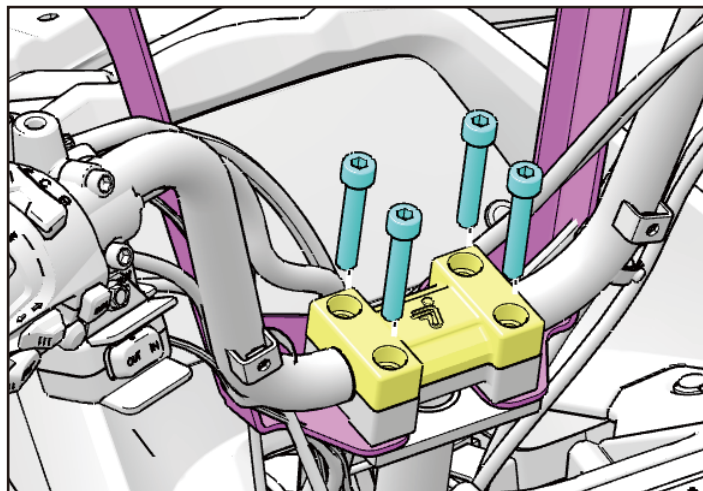

5. Install the windshield onto the brackets using 4 pieces of bolts M6×25 and 4 pieces of nuts M6. Tightening torque: $10 \pm 3 \text{ N}\cdot\text{m}$.

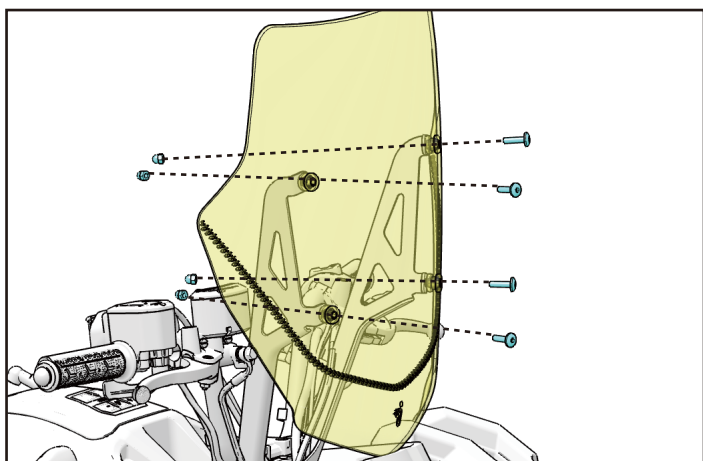

6. Depending on the actual condition of the vehicle, secure the left handlebar wiring harness to the left windshield bracket using cable ties. Secure the brake hose and parking lever cable to the right windshield bracket using cable ties.

